



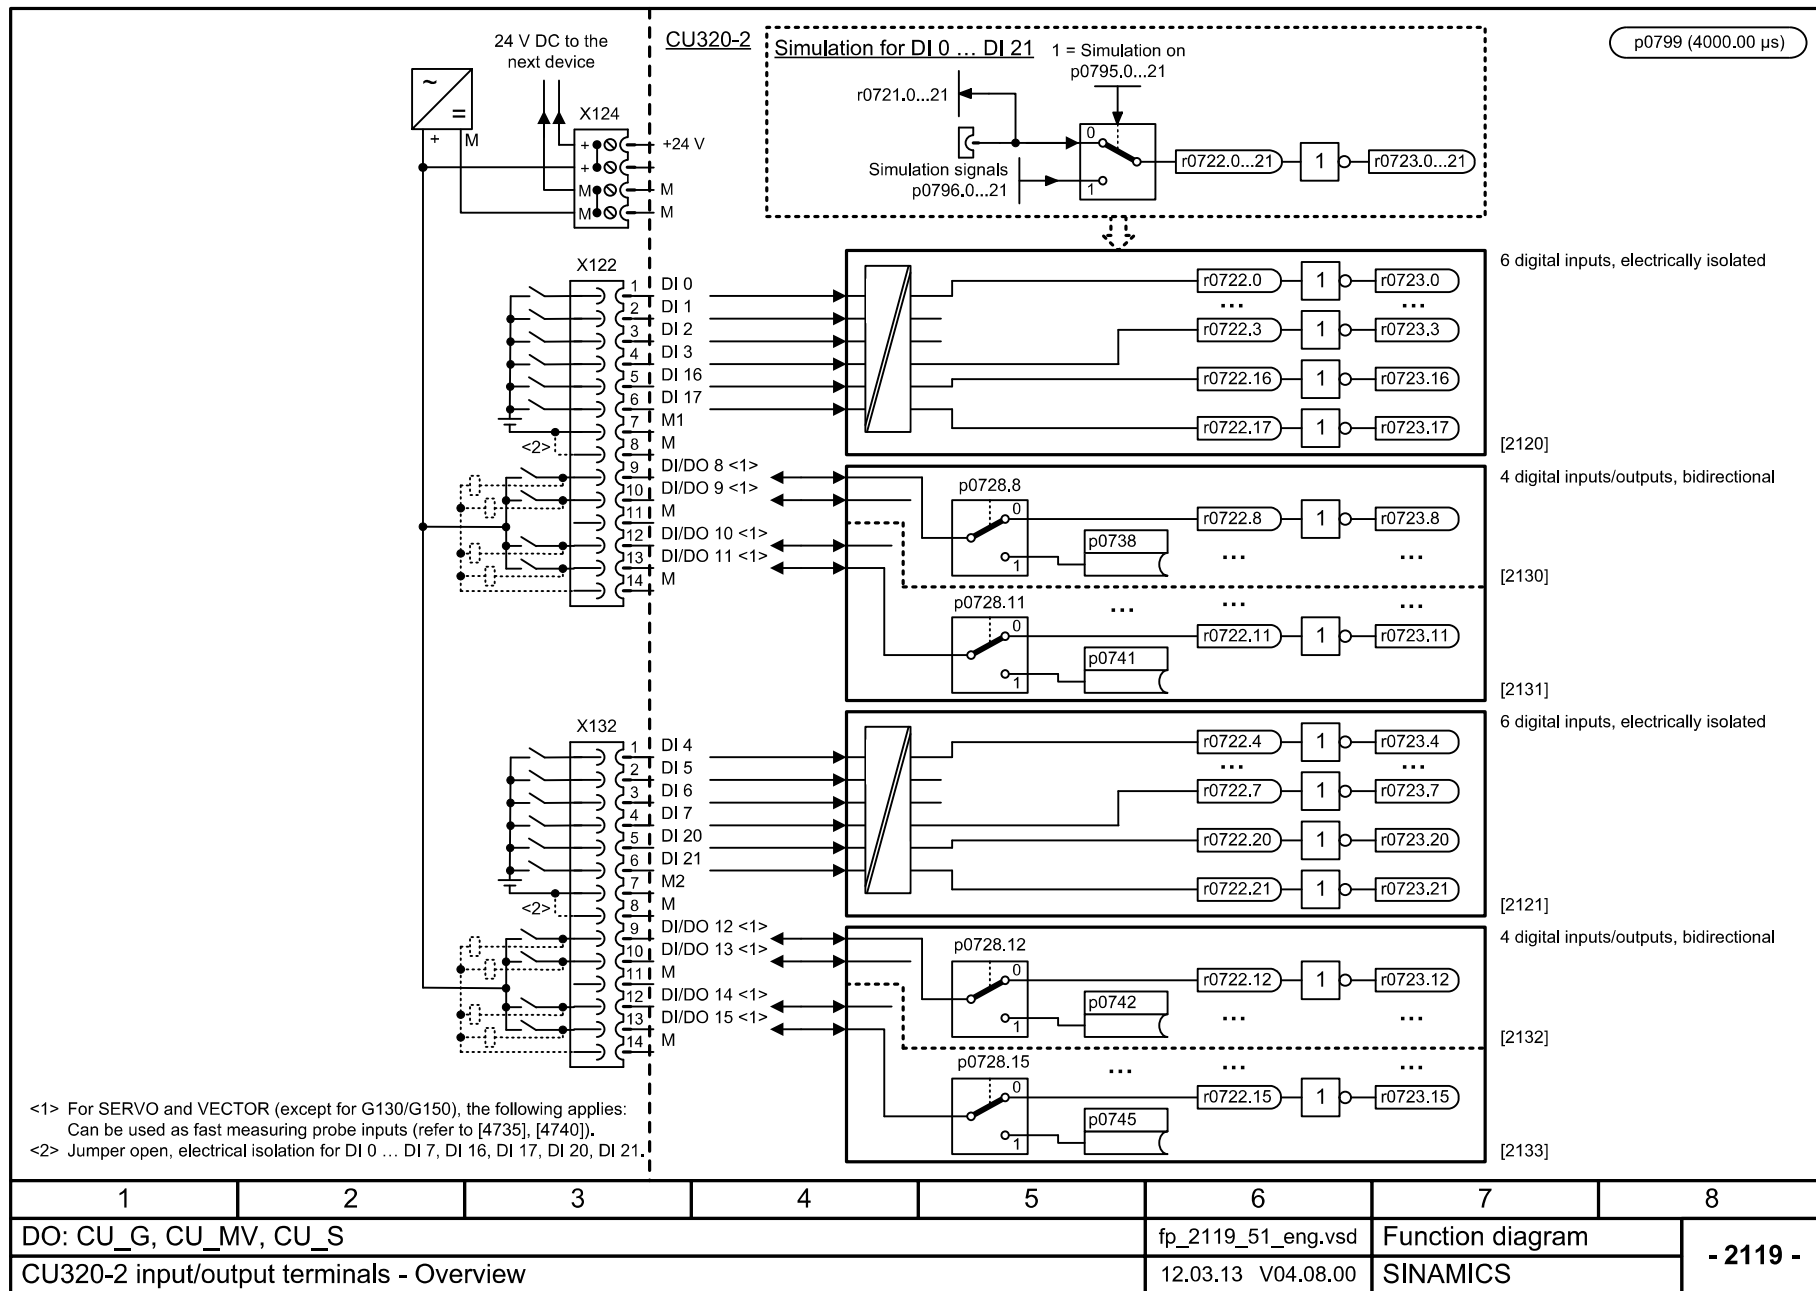


接收的PZD 信号

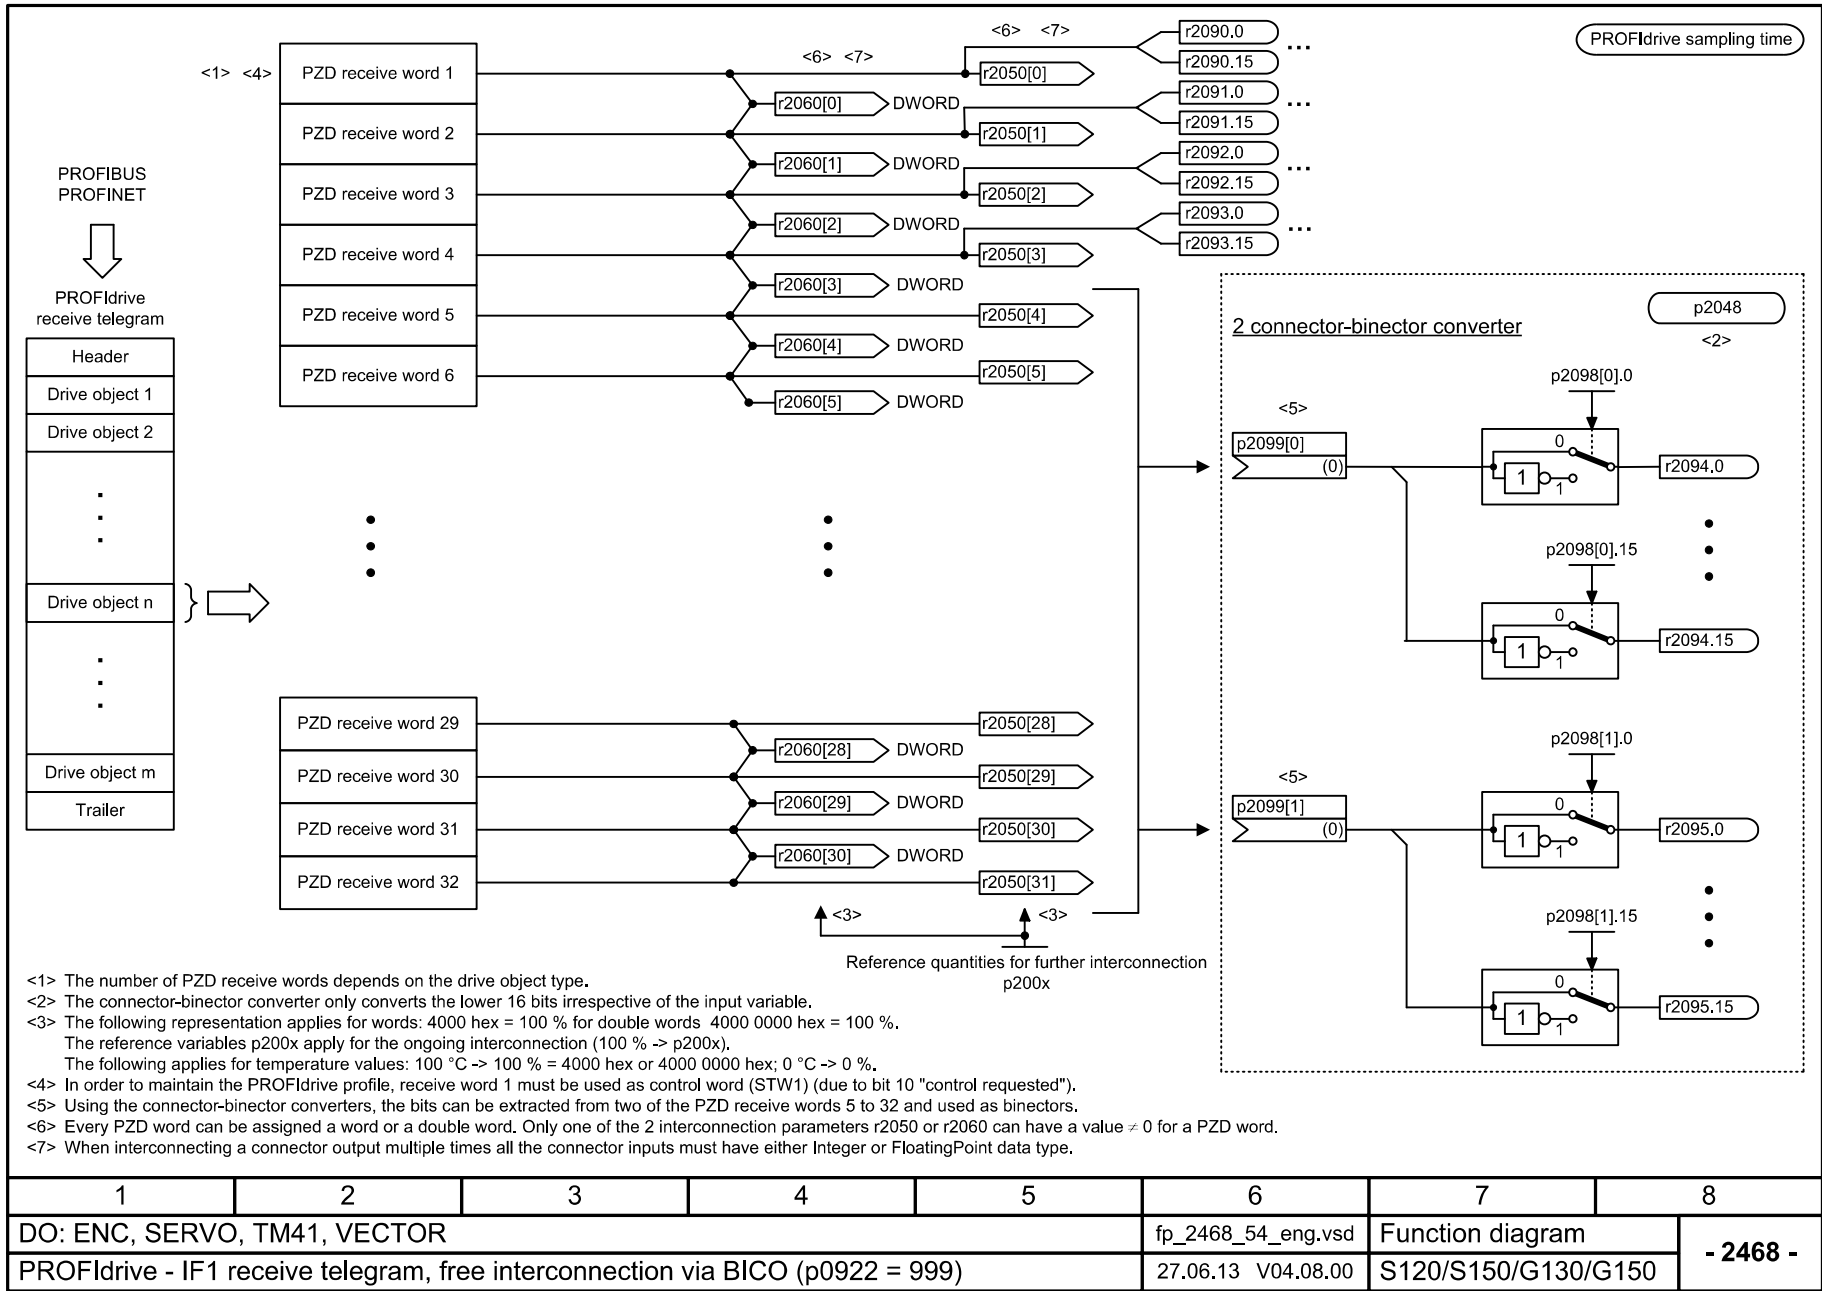

发送的PZD 信号


SINAMICS S120/S150
参数手册 (LH1), 2016/07, 6SL3097-4AP00-0RP8

图 3-74 2470 - IF1 发送报文, 通过 BICO 自由互联 (p0922 = 999)

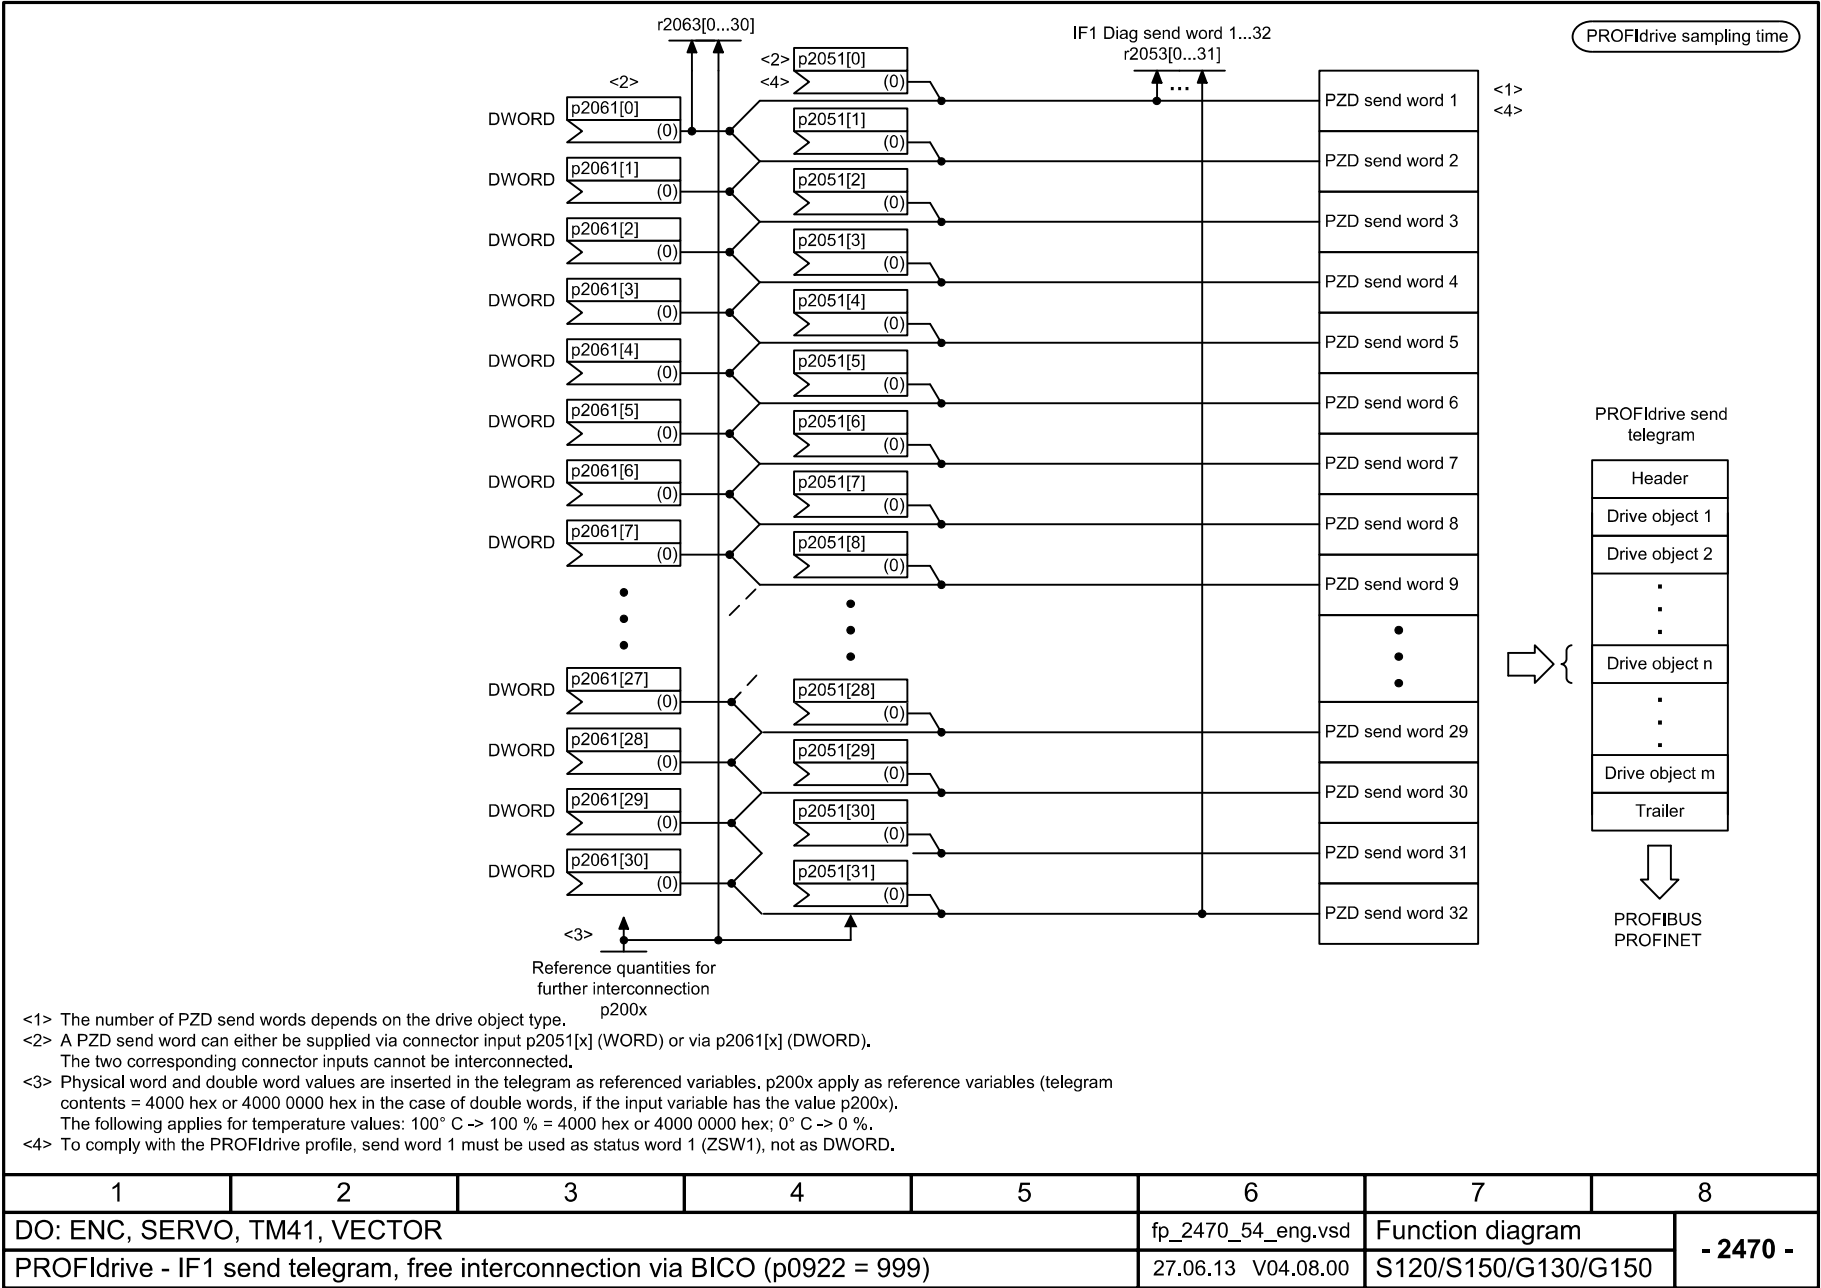

控制字1

图 3-93 2501 - 顺序控制控制字

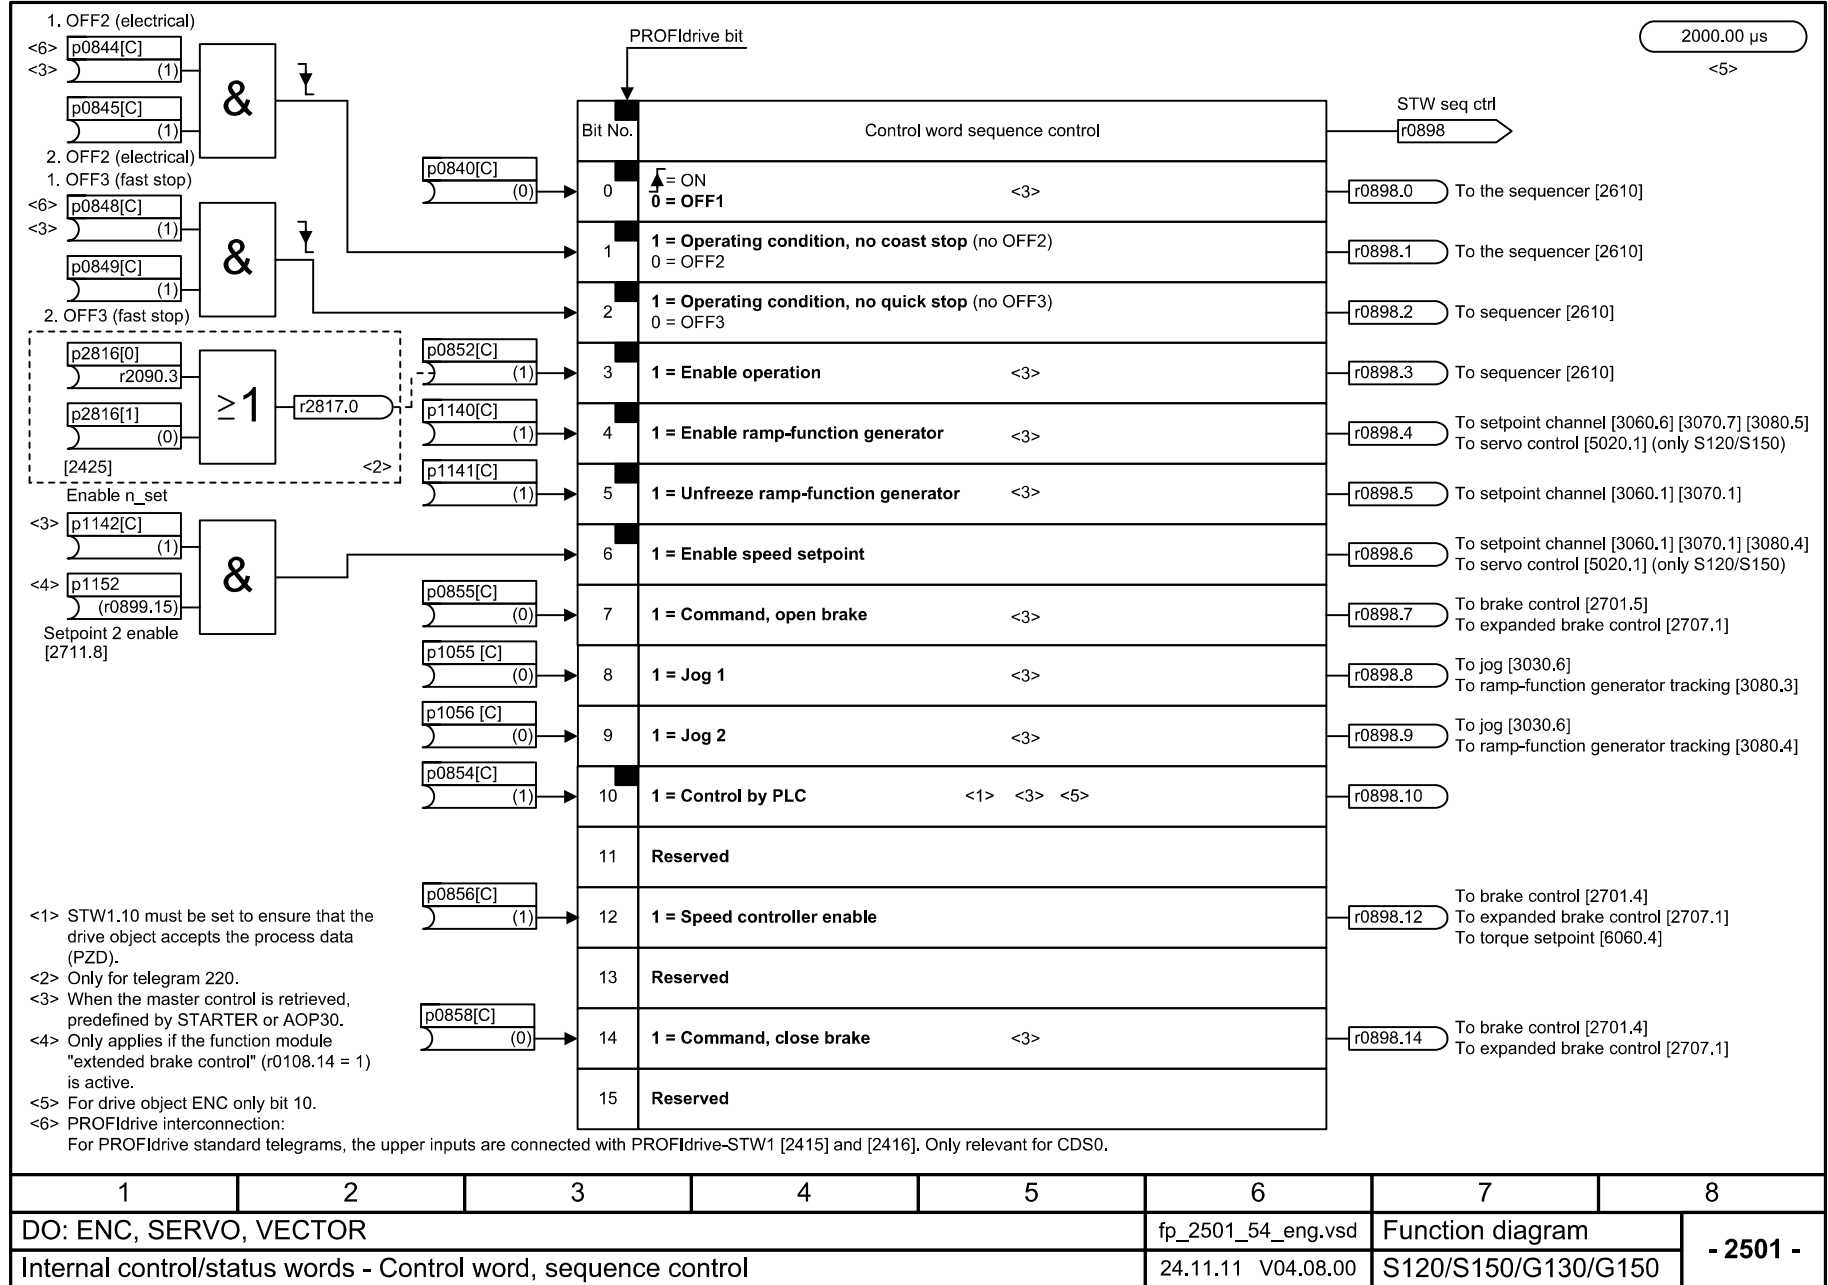


状态字1


1900



设定点通道

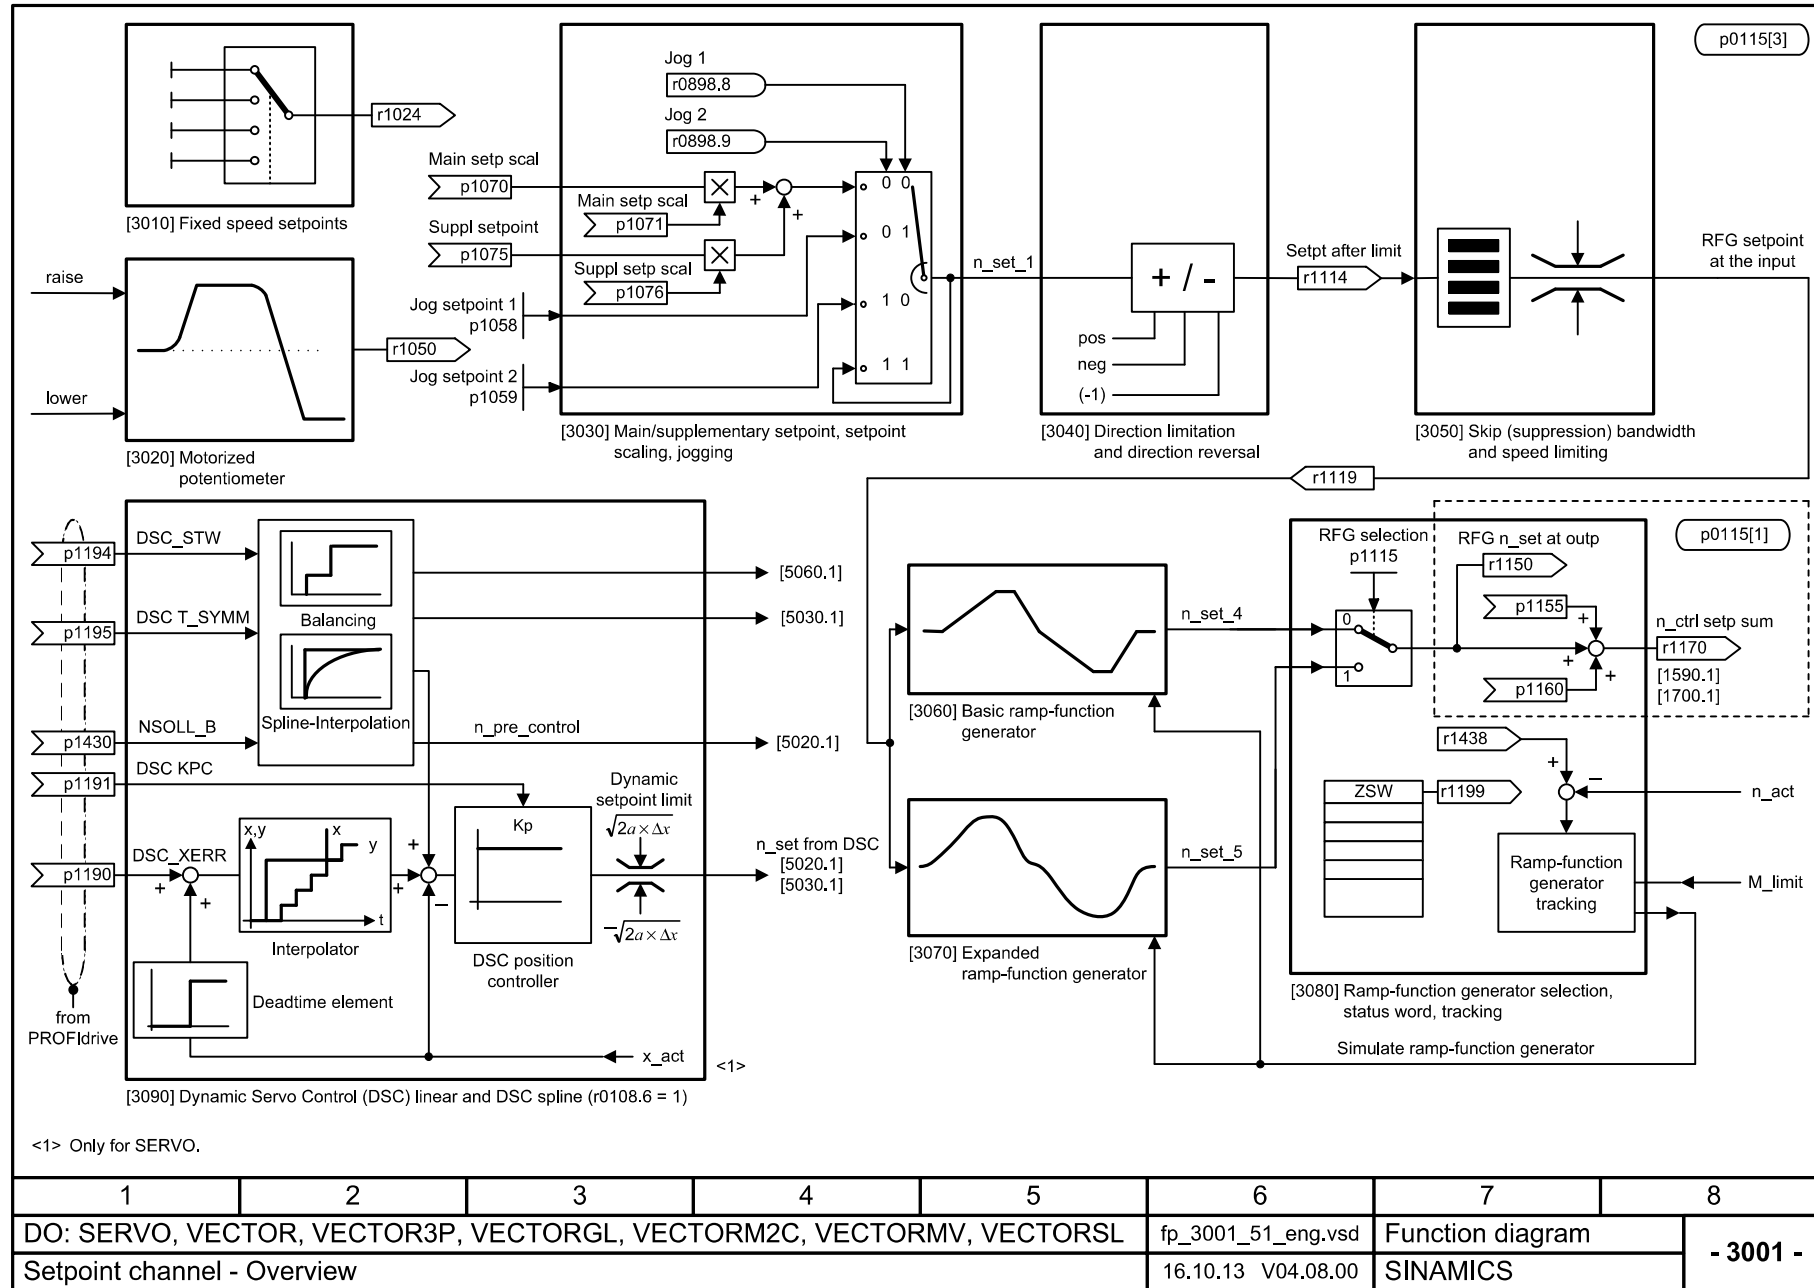

矢量控制框图

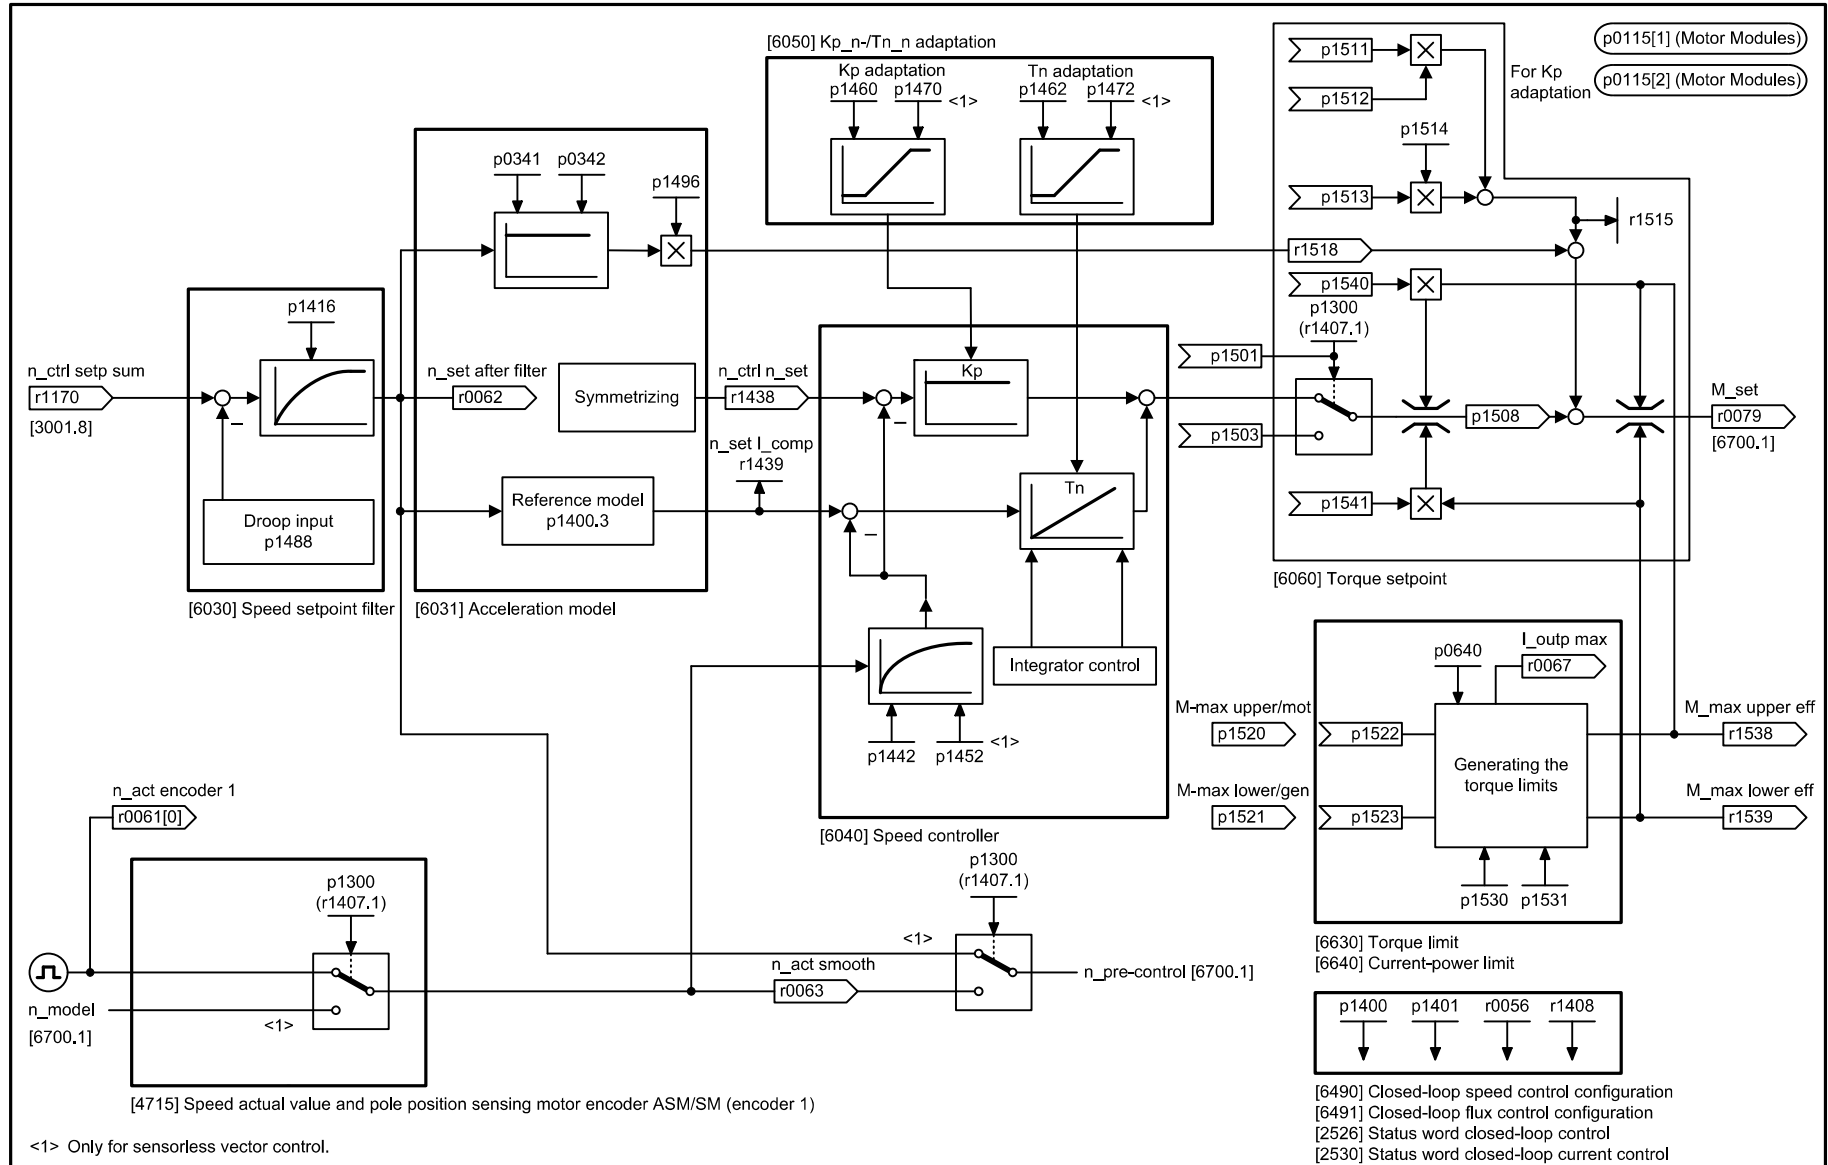

1	2	3	4	5	6	7	8
DO: VECTOR					fp_6020_54_eng.vsd	Function diagram	
Vector control - Speed control and generation of the torque limits, overview					11.04.14 V04.08.00	S120/S150/G130/G150	

图 3-227 6020 - 转速控制和转矩限值形成, 一览

V/F控制框图

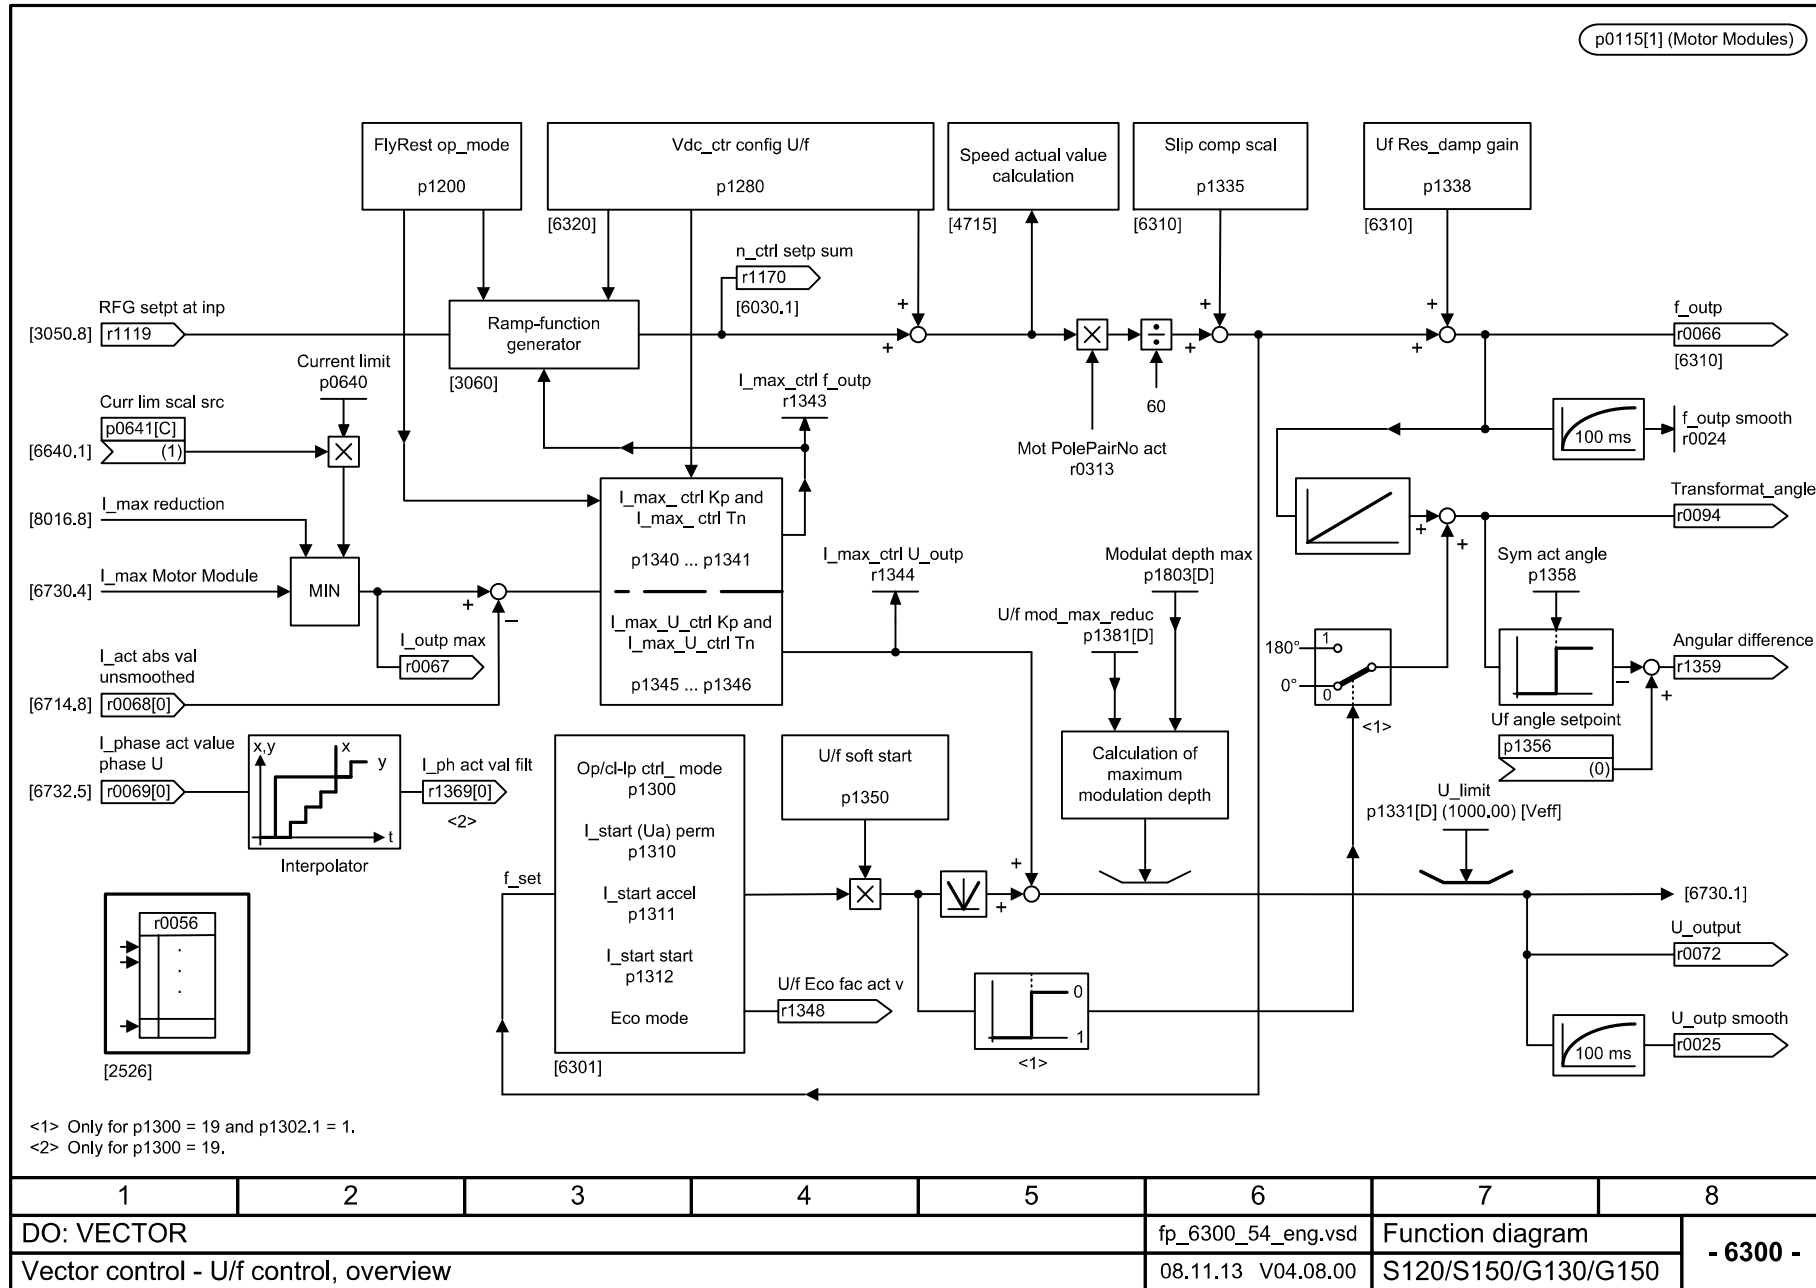


图 3-235 6300 - V/F 控制，一览