



ET200 SP HA 的安全模板在卡件内置了闪存，存放 F 目标地址。只需软件指定成功可存储（掉电不丢失）。

新的模板没有 F 目标地址，在线诊断时提示“NO Valid F-address available”。

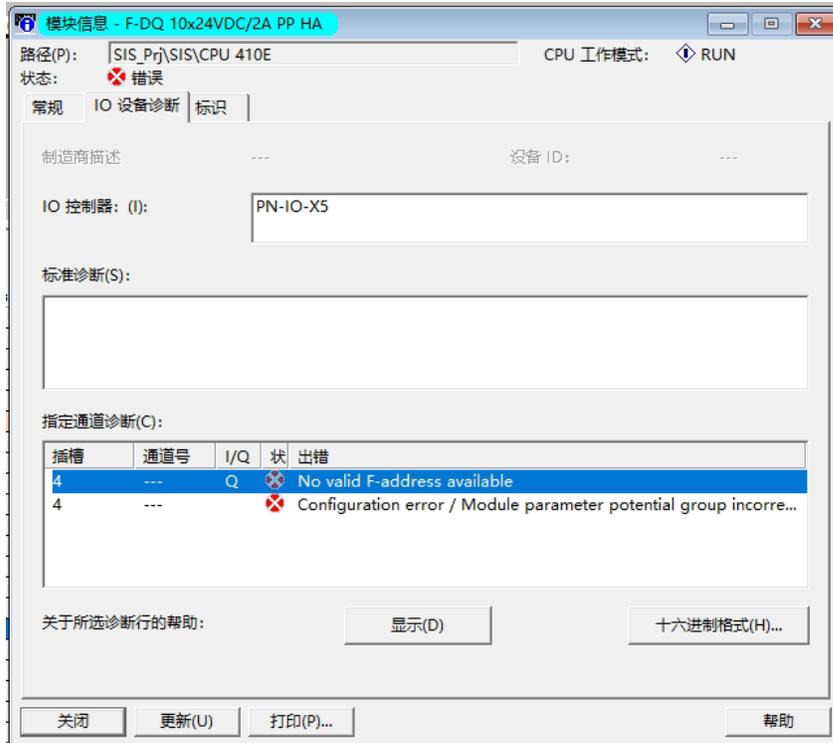


解决方案：


1. 保证硬件组态下装到 CPU，从站和 CPU 的 PN 通讯是好的。硬件在线后，选中目标 I/O 模板，选择“命名 F 地址”。

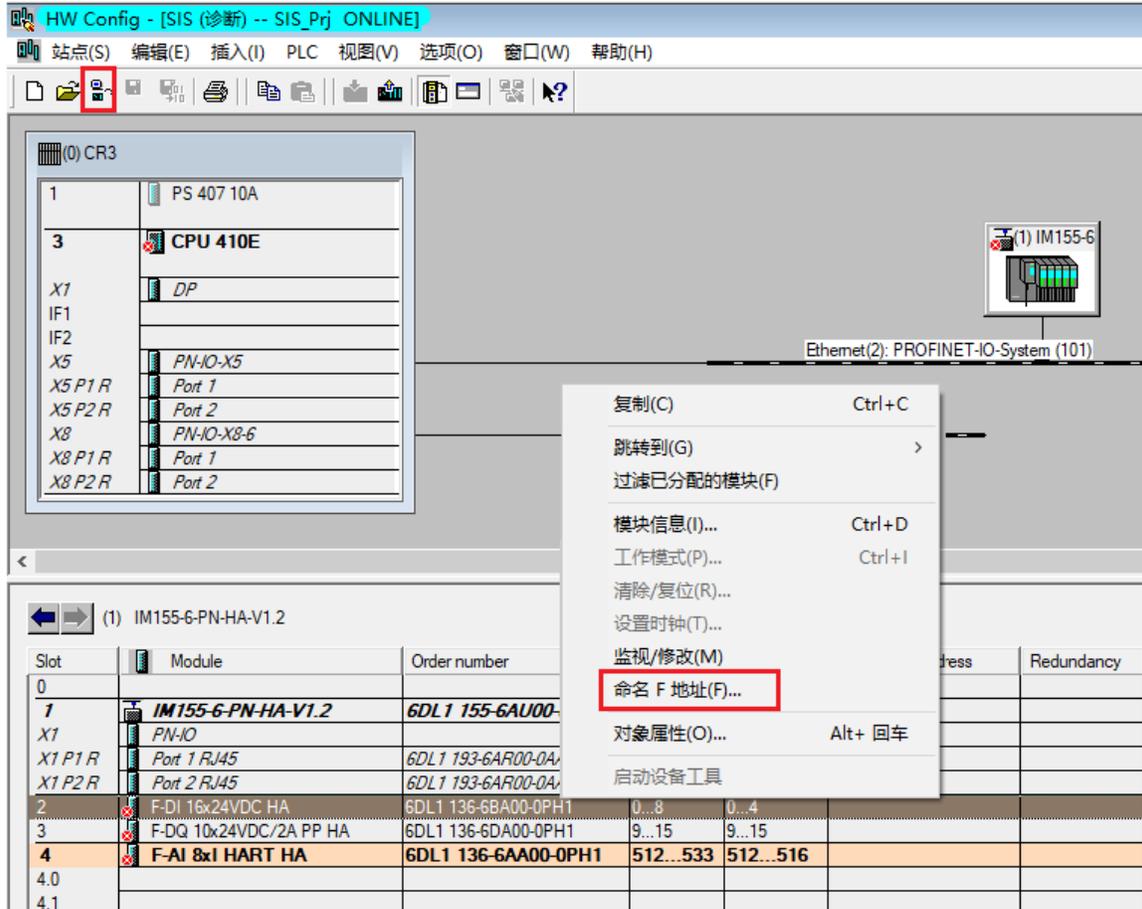

然后在弹出窗口里选择“Identification” 识别目标，在下图中前两个模板是存在的，第三块是缺失，所以提示找不到。

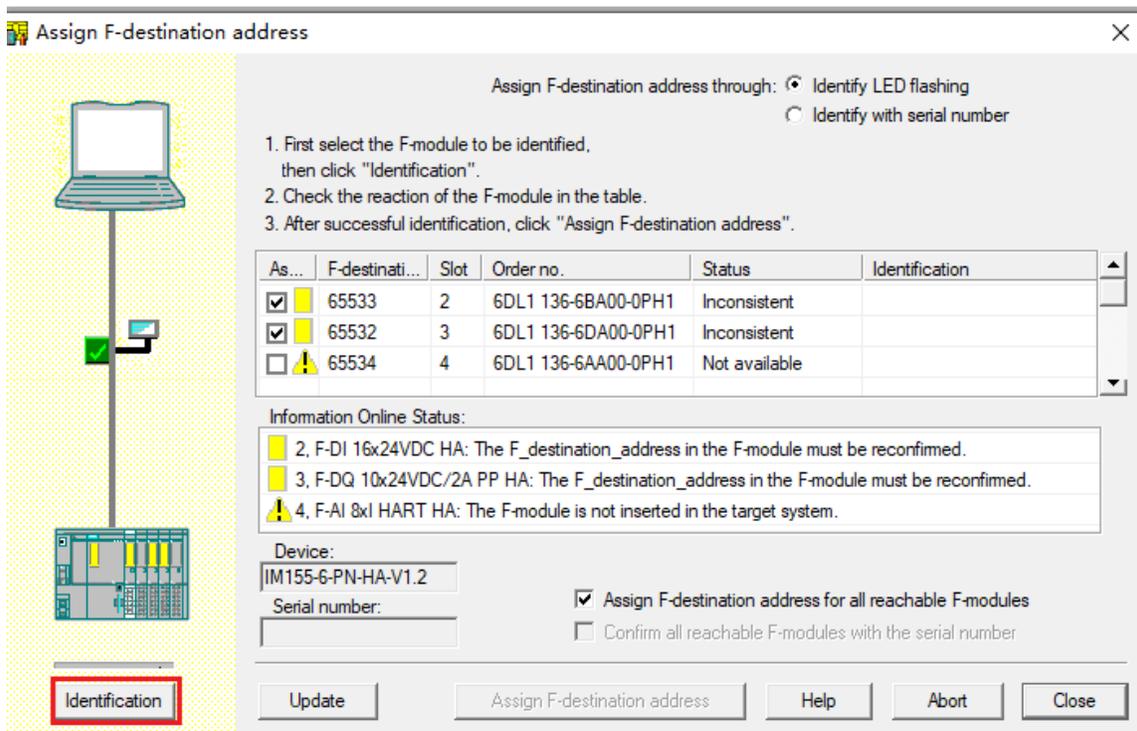

选中存在的目标 模板，再在下面选择“Assign F-destination address”

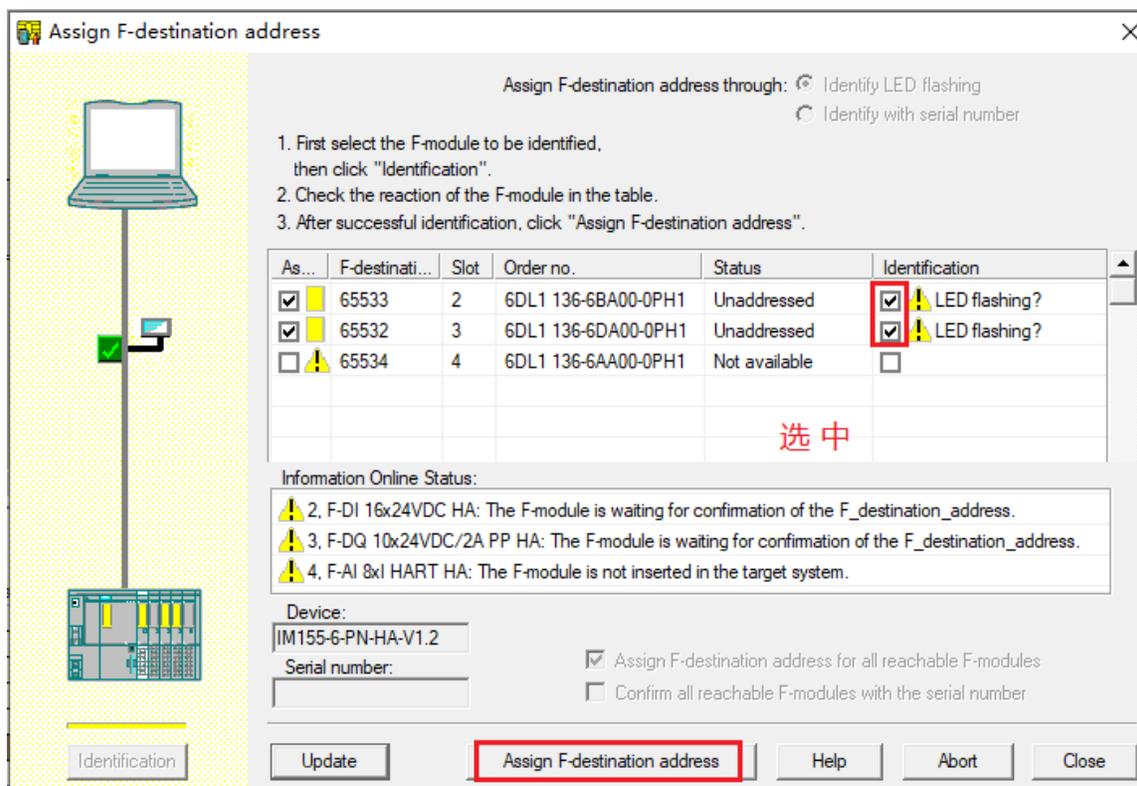

结束后模板就可以正常工作了。

**Assign F-destination address** [X]

Assign F-destination address through:  Identify LED flashing  
 Identify with serial number

1. First select the F-module to be identified, then click "Identification".
2. Check the reaction of the F-module in the table.
3. After successful identification, click "Assign F-destination address".

As...	F-destinati...	Slot	Order no.	Status	Identification
<input type="checkbox"/> <input checked="" type="checkbox"/>	65533	2	6DL1 136-6BA00-0PH1	Assigned	
<input type="checkbox"/> <input checked="" type="checkbox"/>	65532	3	6DL1 136-6DA00-0PH1	Assigned	
<input type="checkbox"/> <input checked="" type="checkbox"/>	65534	4	6DL1 136-6AA00-0PH1	Not available	

Information Online Status:

 4, F-AI & HART HA: The F-module is not inserted in the target system.

Device: IM155-6-PN-HA-V1.2

Serial number:

Assign F-destination address for all reachable F-modules  
 Confirm all reachable F-modules with the serial number

Identification [Update] [Assign F-destination address] [Help] [Abort] [Close]